


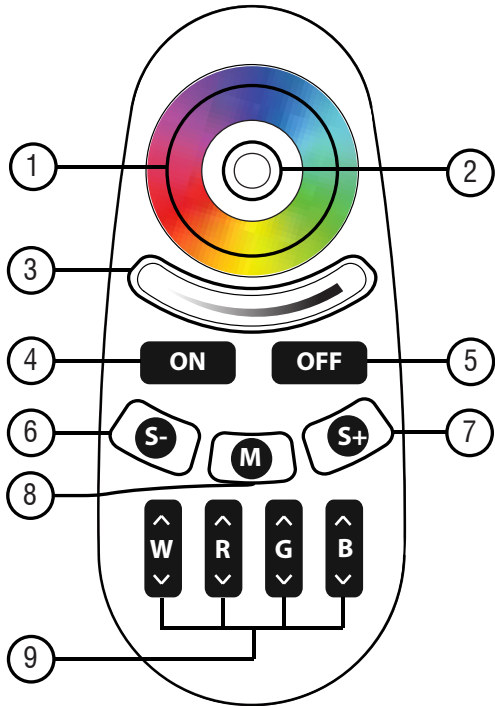





 










RGBW1-KIT

OPERATION INSTRUCTIONS

RGBW1-C
Handheld Remote Control



- 1 **Color Wheel:** Touch desired color on touch-sensitive color wheel [] to select light color.
- 2 **Remote Status:** This red LED status light [] illuminates to indicate when the remote is transmitting a command.
- 3 **Brightness:** Glide finger along touch-sensitive brightness slider [] to dim or increase brightness level.

- 4 **On:** The ON [] button turn lighting on. Additionally, pressing and holding the ON [] button for two seconds will set the zone to White mode.
- 5 **Off:** The OFF [] button turns the lighting off in that zone.
- 6 **Slow Down:** Press the Slow Down button [] to slow down a color changing program mode while mode is running.
- 7 **Speed Up:** Press the Speed up button [] to slow down a color changing program mode while mode is running.
- 8 **Mode:** The mode button [] is a multi-function button that accesses the remote's nine built-in, preset color changing program modes. Press button once to start the first built-in color changing mode. Press a second time to start the next built-in mode, and so on...
- 9 **Color Control:** Select the color to be controlled by pressing number on desired color button [ ,  ,  , or ] and then making desired adjustments. Press top of color button [] to increase color. Press bottom of color button [] to dim color. "W" is for white, "R" is for red, "G" is for green, and "B" is for blue.