 
 


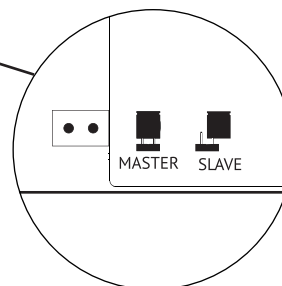 


MASTER/SLAVE SYNC INSTRUCTIONS

FOR RFR-SERIES RECEIVERS

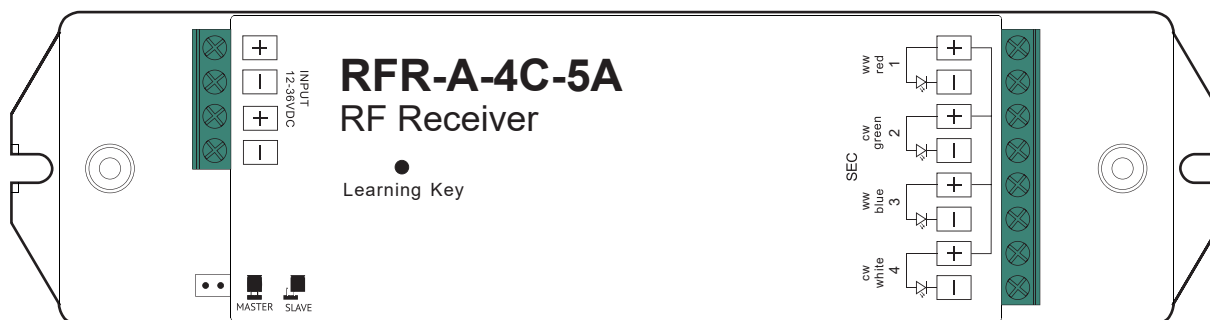

- 1 Ensure that all RF receivers in same zone are set to factory default SLAVE position by removing white plastic cover plates and observing MASTER/SLAVE jumper placement:

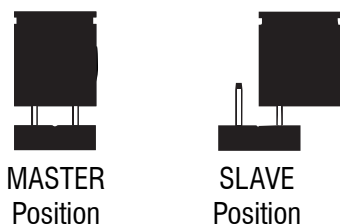

- 2 Set only one, centrally located, RF receiver to MASTER position by removing jumper and repositioning as indicated above
- 3 Learn all RF receivers to be synchronized into one zone using any compatible RF controller
- 4 Cycle master RF receiver's power off and back on to initiate synchronization. The master RF receiver will now send a synchronization signal approximately every 30 seconds to slaved units